

How do I adjust the radius or distance of throw on my Hunter rotor?

The easiest way to make adjustments on your Hunter rotor is to use a Hunter adjustment wrench. This adjustment wrench is available through the Hunter online store.

There are two adjustments that can be made on your rotor, the arc and the radius. The radius adjustment changes the distance water is going to travel out of the nozzle. Fine tuning coverage in your system can sometimes require adjustments to a rotors radius.

Adjusting the Radius

1. Insert the steel hex end (3/32" allen key) of the Hunter adjustment wrench into the radius reduction screw's socket.
2. Turning the wrench clockwise will decrease the rotors radius, counterclockwise will result in an increased distance.



If you can't find the answers, please contact us at your convenience.

Viet Garden Technical Support experts are available to answer your question(s) about Hunter products and their usage. Simply call us or submit an email request.

Viet Garden is Hunter Exclusive Distributor in Vietnam

205 Dao Duy Tu St, Dist. 10, HCM City, Vietnam

Tel: 84-8-3957 4060, Fax: 84-8-3957 4059, Email: info@vietgardens.vn, Website: www.vietgardens.vn