

TROUBLESHOOTING GUIDE

ENG

Problem	Causes	Solutions
There is no display.	Display is off. Battery is dead.	Press any button for 1 second. Replace the battery.
Display indicates watering but none is occurring.	No water pressure. Faulty solenoid. Incompatible solenoid.	Turn on main system supply. Replace solenoid. Must use Hunter DC Latching Solenoid (P/N 458200) or other compatible DC latching solenoid.
Automatic irrigation does not start at start time.	Controller in System Off mode. AM/PM of time of day not set correctly. AM/PM of start time not set correctly.	Verify that controller is programmed for automatic watering. Correct AM/PM of time of day. Correct AM/PM of start time.
Rain sensor does not suspend watering.	Rain sensor defective or miswired.	Verify proper operation of the rain sensor and wire connections (see page 10).
Controller waters more than one time.	The program has more than 1 start time assigned to it. Each program has up to 4 start times.	Eliminate program start times as needed.